
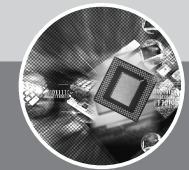


# IR Intelligent Positioning System

## Installation Manual

*IR Intelligent Positioning System*

*Installation Manual*

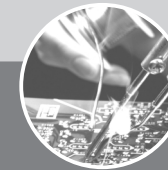

T2.00148534

【 Version 1.0.0 】

## Welcome

Thank you for purchasing our speed dome!

**Please read the following safeguards and warnings carefully before you install or use the product!**

## Important Safeguards and Warnings

### Safety Measures

#### 1. Qualified Engineer Needed

- The installation engineer or maintenance engineer shall have corresponding CCTV system installation certificate or maintenance qualification certificate.
- The installation engineer or maintenance engineer shall have qualification certificate for work at height.
- The installation engineer or maintenance engineer shall have the basic knowledge and operation technique for low-voltage cable layout and low-voltage electronic cable connection.
- Please read the installation manual carefully and keep it well for future reference,
- We are not liable for any problems caused by unauthorized modifications or attempted repair.

#### 2. Lifting Appliance Requirement

- Please select the proper speed dome installation mode and use the lifting appliances at the safety environment.
- The lifting appliances shall have the enough capacity to reach the installation height.
- The lifting appliances shall have safe performance.

**The precaution measures include two types: Warning and Note.**

- **Warning:** It is to alert you there is an optional risk of death or series injury!
- **Note:** It is to alert you there is an optional risk of damage or property loss!

**Important Safeguards and Warnings****Warning**

- 1.All installation and operation here should conform to your local electrical safety codes. We assume no liability or responsibility for all the fires or electrical shock caused by improper handling or installation.
- 2.Do not connect several speed domes to one power adapter. It may result in overheat or fire if it exceeds the rated load.
- 3.Before you connect the cable, install or uninstall, or begin the daily maintenance work, please turn off the power and unplug the power cable.
- 4.Please make sure the product is secured firmly on the wall or the ceiling.
- 5.Please turn off the power and unplug the power cable, If there is any smoke, disgusting smell, or noise. Please contact your local retailer or customer service center for help.
- 6.All the examination and repair work should be done by the qualified service engineers. We are not liable for any problems caused by unauthorized modifications or attempted repair
- 7.Before installation, check whether there are anti-corrosion notices. If there are no anti-corrosion notices, do not install the speed dome in environment where the speed dome is prone to corrosion, for example by the sea or on the ship.

**Note****1.Safety Transportation**

- Heavy stress, violent vibration or water splash are not allowed during transportation, storage and installation.
- This series product must use split type package during the transportation.
- We are not liable for any damage or problem resulting from the integrated package during the transportation.

**2.When device is malfunction**

Shut down the device and disconnect the power cable immediately if there is smoke, abnormal smell or abnormal function. Please contact your local retailer ASAP.

**3.Do not try to dismantle or modify the device**

- There is risk of personal injury or device damage resulting from opening the shell.
- Please contact your local retailer if there is internal setup or maintenance requirement.
- We are not liable for any problems caused by unauthorized modifications or attempted repair.

**Important Safeguards and Warnings****4.Do not allow other object falling into the device**

- Please make sure there is no metal or inflammable, explosive substance in the speed dome.
- The above mentioned objects in the device may result in fire, short-circuit or damage.
- Please shut down the device and disconnect the power cable if there is water or liquid falling into the camera. Please contact your local retailer ASAP.
- Please pay attention to the camera. Avoid the sea water or rain to erode the camera.

**5.Handle carefully**

Do not allow this series product fall down to the ground.  
Avoid heavy vibration.

**6.Installation Environment Requirement**

- This series speed dome should be installed in a cool, dry place away from direct sunlight, inflammable, explosive substances and etc.
- This series product shall be away from the strong electromagnetism radiant, please keep it away from wireless power, TV transmitter, transformer and etc.
- This device needs to be installed in restricted access areas, and anyone who operates the device needs to be aware of the safety requirements of the device.

**7.Daily Maintenance**

- Please use the soft cloth to clean dust on the shell, or you can use soft cloth with cleaning liquid to clean the shell and then use soft cloth to make it dry.
- Do not use gasoline, dope thinner or other chemical material to clean the shell. It may result in shell transfiguration or paint flake.
- Do not allow the plastic or rubber material to touch the shell for a long time. It may result in paint flake.
- It is highly recommended to use the product with a lightning-proof device, which can realize better lightning-proof effect.

## Table of Contents

<b>1 Installation Preparation</b>	<b>05</b>
1.1 Basic Requirement	05
1.2 Installation Check	05
1.3 Cable Preparation	05
1.3.1 The Min Specification Requirements of Cable	05
1.3.2 Select Power Supply Cable According to Transmission Distance	06
<b>2 Install Device</b>	<b>06</b>
2.1 Check Accessories	06
2.2 Open Device	06
2.3 Reset Button & Micro SD Card Slot Location	07
2.3.1 Use Reset Button	08
2.3.2 Install Micro SD Card	08
2.4 Camera Cable	08
2.4.1 Cable Description	08
2.4.2 Cable Connection	09
2.4.3 Alarm Cable Connection	10
2.4.4 Camera GND Cable Connection	10
<b>3 Wall Mount</b>	<b>11</b>
3.1 Installation Component and Dimension	11
3.2 Wall-mounted Bracket Installation Step	12
3.2.1 Installation Conditions	12
3.2.2 Wall-mounted Bracket Inverted Installation	12
3.2.3 Wall-mounted Bracket General Installation	13
<b>4 APPENDIX I LIGHTNING AND SURGE</b>	<b>15</b>
4.1 Outdoors	15
4.2 Indoors	16
<b>5 APPENDIX II ABOUT RS485 BUS</b>	<b>17</b>
5.1 RS485 Bus Main Feature	17
5.2 RS485 Bus Transmission Distance	17
5.3 The Problem in Practical Use	17
5.4 RS485 Bus FAQ	18
<b>6 APPENDIX III THE RELATIONSHIP BETWEEN DC 36V CABLE DIAMETER AND TRANSMISSION DISTANCE</b>	<b>19</b>
<b>7 APPENDIX IV WIRE GAUGE REFERENCE SHEET</b>	<b>20</b>

# 1

## Installation Preparation

### 1.1 Basic Requirement

- All installation and operation here should conform to your local electrical safety and fire prevention codes.
- Make sure if the application scene of the product conforms to the installation requirement. Please contact local dealer if you have any confusions.
- Please use the product according to the operating environment.
- Please keep the original packing materials properly after you open the packing box; use original packing materials to pack the product and send it to back for maintenance in case the device malfunctions.

### 1.2 Installation Check

- Please make sure the installation environment has enough space to install the product and its components.
- Please make sure the ceiling or wall can sustain the 8X weight of the speed dome and its corresponding installation component.
- Please make sure the wall is thick enough to install expansion bolts (need to be prepared by users themselves).
- It needs to pay attention that the installation height is required to be more than 6m if it is a laser speed dome.

### 1.3 Cable Preparation

Please select the min specification requirement of cable and video coaxial cable according to the transmission distance.

#### 1.3.1 The Min Specification Requirements of Cable

- 75 ohm impedance.
- Full cable with copper conductor
- 95% knitted copper shield
- Please refer to appendix II for more information about RS485 communication cable.

International Model	Max Distance(Ft\M)
RG59/U	750ft (229m)
RG6/U	1,000ft (305m)
RG11/U	1,500ft (457m)

**Note:**

The above can be applied to analog speed dome and network speed dome.

### 1.3.2 Select Power Supply Cable According to Transmission Distance

Refer to Appendix III for AC 24V power supply device.

Please refer to the following table for the cable specifications of PoE power supply devices.

PoE Specification	Cable Specification
AF	CAT4 and higher
AT	CAT5 and higher
HiPoE or BT	CAT5E and higher

## 2

## Install Device

### 2.1 Check Accessories

Before installation, please check if the device is complete in the packing box and all the components are included (refer to packing list for more details)

### 2.2 Open Device

Take out the speed dome, the appearance is shown in Figure 2-1.

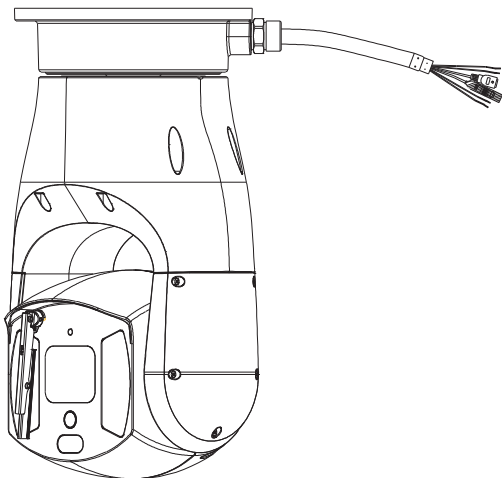


Figure 2-1

### 2.3 Reset Button & Micro SD Card Slot Location

#### SD card on the main board

Open the cover on the speed dome and you can see the Reset button on the PTZ mainboard. See Figure 2-2.

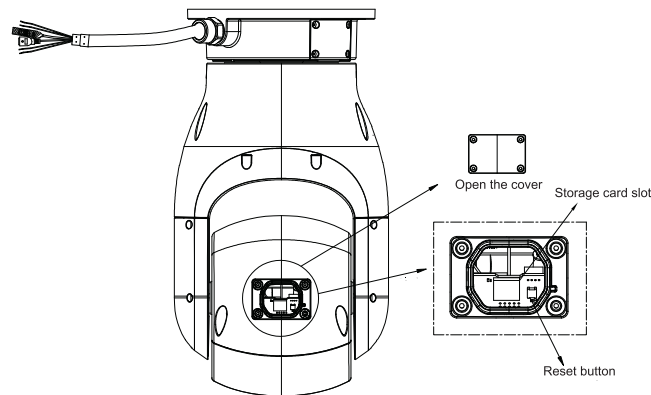


Figure 2-2

#### SD card on the speed dome module

Open the cover of speed dome, and you can see Micro SD card slot on the speed dome module, which is shown in Figure 2-3.

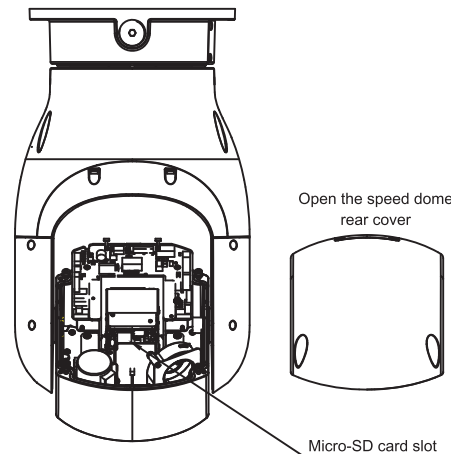


Figure 2-3

### 2.3.1 Use Reset Button

Long press the reset button (more than 10 seconds) to reset the device.

### 2.3.2 Install Micro SD Card

Micro SD card is used for data storage. Micro SD card slot is located on the PTZ control expansion board, you can see it after you open the speed dome cover, which is shown in Figure 2–3. The installation steps of Micro SD card are shown as follows:

#### Step 1

Press the card slot downward slightly (pay attention to the direction of Micro SD card slot), open it towards the direction of OPEN (refer to the sign on the card slot), and then the slot will open automatically.

#### Step 2

Place the Micro SD card, pay attention that the metal surface of card should be corresponding to the golden fingers of card slot.

#### Note:

Press down the slot slightly and move towards the direction of CLOSE, then you can take out the SD card.

## 2.4 Camera Cable

### 2.4.1 Cable Description

The camera is equipped with a multi-functional combination cable by default, which includes power cable, video cable, RS485 control cable, alarm cable, network cable, and network cable etc. The cable detail is shown in Figure 2–4.

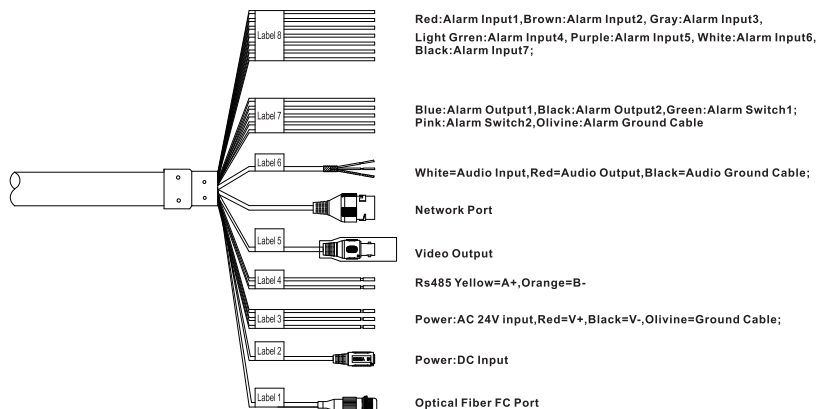


Figure 2–4

#### Note:

Cable combination maybe different according to different models, please refer to the actual cable combination for more details. The cable combination introduced in this chapter is the most complete.

It is not allowed to lift the speed dome by dragging the cable when carrying the speed dome. The wrong way of carrying the device is shown in Figure 2–5.

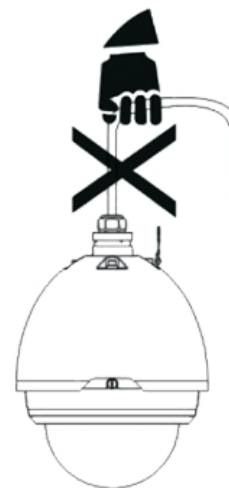


Figure 2–5

### 2.4.2 Cable Connection

Connect the cable pulled out from the wall to the corresponding power cable, video cable, audio cable, RS–485 control cable, alarm cable, network cable, high frequency cable and optical fiber cable etc. of the multi-functional combination cable (according to the actual requirements), and then twine the cable connector with insulated tape to make it waterproof.

#### Note:

- During actual installation, make sure the wire diameter of the cable which is to connect to RS485 control cable can't be too big, otherwise it will affect the control effect. Please refer to appendix II RS485 bus for relevant introduction.
- The video port is covered with the heat shrink tube of high shrinking ratio. After the video port is well connected, please heat the tube to make sure the video port is damp-proof and waterproof.

### 2.4.3 Alarm Cable Connection

The alarm cable connection mode and config steps are shown as follows.

#### Step 1

Connect alarm input device to ALARM\_IN and ALARM\_GND of user cable.

#### Step 2

Connect alarm output device to ALARM\_OUT and ALARM\_COM of user cable, alarm output is relay switch output.

#### Step 3

Open the device WEB interface, make corresponding setting for alarm input and output device in the alarm device. Alarm input of WEB is corresponding to the alarm input of the user cable. It is to set corresponding NO and NC output according to high and low level signal generated by alarm input device when there is alarm.

#### Step 4

It is to set alarm output of user cable on WEB.

### 2.4.4 Camera GND Cable Connection

Connect the power cable YELLOW/GREEN cable of combination cable to the lightning protection device, and make sure the lightning protection device is well grounded.

## 3 Wall Mount

### 3.1 Installation Component and Dimension

The mounting components which are needed for device installation are shown in Figure 3-1.

#### Note:

Wall-mounted bracket is optional, please select according to actual situation.

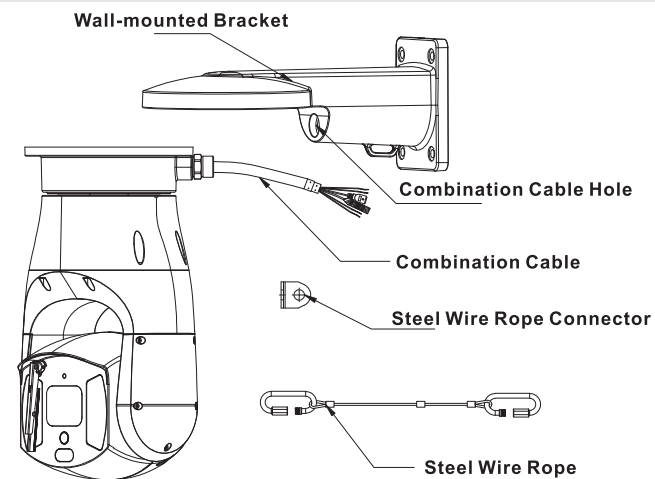


Figure 3-1

The appearance of wall-mounted bracket is shown in Figure 3-2, refer to Figure 3-3 for dimension. The unit is mm.

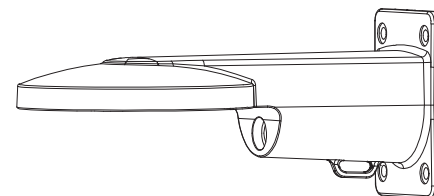


Figure 3-2

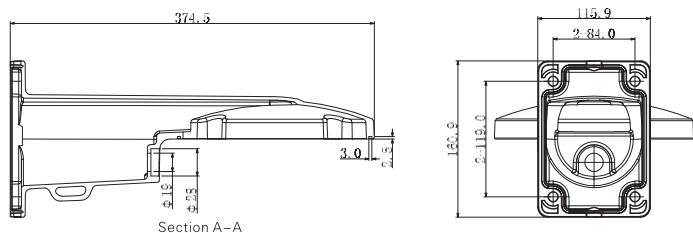


Figure 3-3

## 3.2 Wall-mounted Bracket Installation Step

### 3.2.1 Installation Conditions

Wall-mounted speed dome can be installed on hard wall structure both indoors and outdoors. The wall needs to meet the following installation conditions.

The wall should be thick enough to install expansion bolts.

The wall shall sustain at least 8x weight of the speed dome, bracket and so on.

### 3.2.2 Wall-mounted Bracket Inverted Installation

The installation steps are shown as follows.

#### Step 1

Take wall-mounted bracket ground as template, draw punching position on the wall and dig holes. Put the expansion bolts into the holes you just dug.

#### Step 2

Pull the multi-functional combination cable through the wall-mounted bracket, use screws to fix the camera on the bracket and buckle both sides of steel wire rope on the connector and bracket fixing ring, which is shown in Figure 3-4.

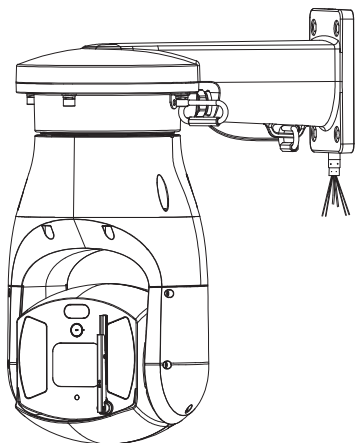


Figure 3-4

#### Step 3

Connect the camera cable to wall cable.

#### Step 4

Lift the camera and bracket to the level of wall mounting holes, use flat gasket and four hex nuts to fix it on the wall. So far, the device installation has been completed, which is shown in Figure 3-5.

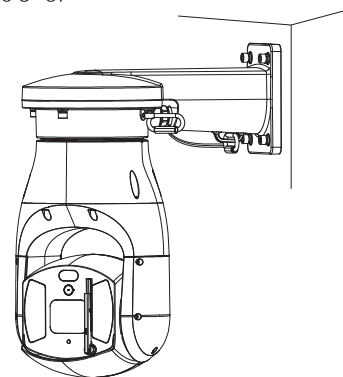


Figure 3-5

### 3.2.3 Wall-mounted Bracket General Installation

#### Step 1

Take wall-mounted bracket ground as template, draw punching positions on the wall and dig holes. Put the expansion bolts into the holes you just dug.

#### Step 2

Pull the multi-functional combination cable through the wall-mounted bracket, use screws to fix the camera on the bracket and buckle both sides of steel wire rope on the connector and bracket fixing ring, which is shown in Figure 3-6.

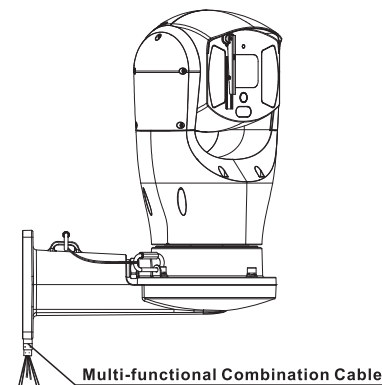


Figure 3-6



**Step 3**

Connect camera cable to wall cable.

**Step 4**

Lift the camera and bracket to the level of mounting holes on the wall, use flat gasket and four hex nuts to fix it on the wall. So far, the device installation has been completed, which is shown in Figure 3-7.

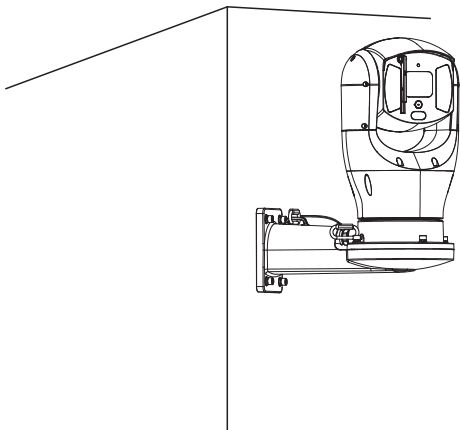


Figure 3-7

**Note:**

Customers can implement ceiling mount according to the actual situation, which is shown in Figure 3-8.

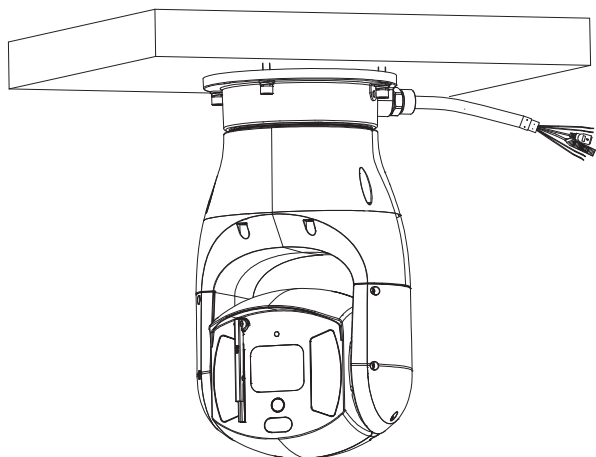


Figure 3-8

# 4

## APPENDIX I LIGHTNING AND SURGE

### 4.1 Outdoors

This series speed dome adopts TVS lighting protection technology. It can effectively prevent damages from various pulse signals below 8000W, such as sudden lighting and surge. While maintaining your local electrical safety code, you still need to take necessary precaution measures when installing the speed dome in the outdoor environment.

- The distance between the signal transmission cable and high-voltage device (or high-voltage cable) shall be at least 50 meters.
- Outdoor cable layout shall go under the penthouse if possible.
- For vast land, please use sealing steel tube under the land to implement cable layout and connects one point to the earth. Open floor cable layout is forbidden. In area of strong thunderstorm hit or near high sensitive voltage (such as near high-voltage transformer substation), you need to install additional high-power thunder protection device or lightning rod.
- The thunder protection and earth of the outdoor device and cable shall be considered in the building whole thunder protection and conform to your local national or industry standard.
- System shall adopt equal-potential wiring. The earth device shall meet anti-jamming and at the same time conforms to your local electrical safety code. The earth device shall not short circuit to N (neutral) line of high voltage power grid or mixed with other wires. When connect the system to the earth alone, the earth resistance shall not be more than  $4\Omega$  and earth cable cross-sectional area shall be no less than  $25\text{ mm}^2$ . See Figure 4-1.

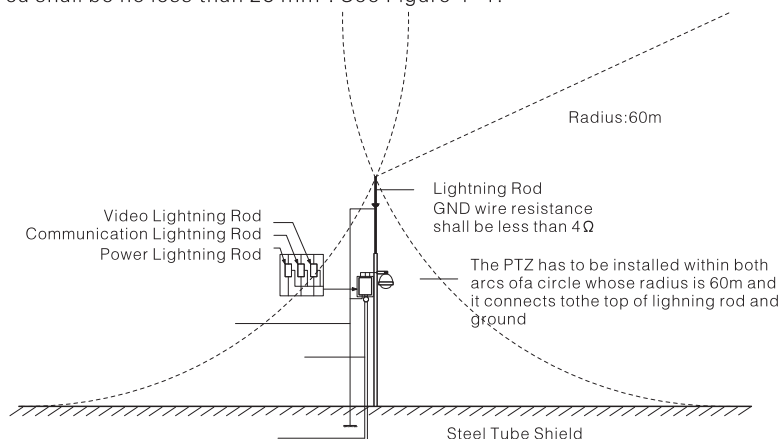


Figure 4-1

## 4.2 Outdoors

The yellow and green GND wire or GND screw of the speed dome should be reliably connected by several strands of copper wire with no less than 25mm<sup>2</sup> and indoor equipotential GND terminal. Please refer to Figure 4–2 for lightningproof installation mode.

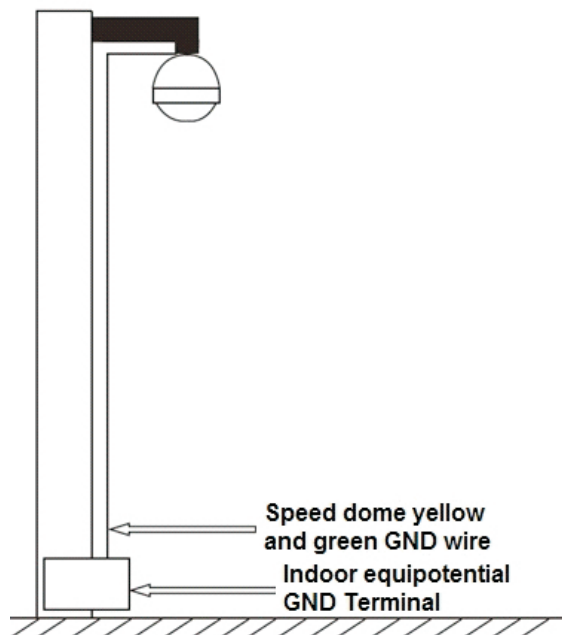


Figure 4–2

# 5

## APPENDIX II ABOUT RS485 BUS

### 5.1 RS485 Bus Main Feature

RS485 is semi duplex communication cable of impedance 120Ω. Its max load amount is 32 effective loads (including main control device and devices to be charged).

### 5.2 RS485 Bus Transmission Distance

When we take 0.56mm (24AWG) twisted-pair as communication cable, the max transmission distance (theoretically) are listed below (according to different baud rates).

Baud Rate	Max Distance
2400 bps	1800m
4800 bps	1200m
9600 bps	800m

In the following situations, the max transmission distance shall become shorter accordingly:

- The communication cable is a little bit thin;
- The surrounding environment has strong electromagnetic interference;
- There are too much devices connected to the RS485 bus;

And vice versa, the max transmission distance shall become longer.

### 5.3 The Problem in Practical Use

In practical usage, we usually adopt star type connection. The terminal resistance shall connect to the furthest two devices (Such as device 1# and device 15# in Figure 5–1 ). But this connection way does not conform to RS485 Bus standard. When the distances between devices are too long, the signal reflection occurs and anti-jamming decreases, thus the signal reliability becomes very low. You can see speed dome is not under control or speed dome is running automatically and can not stop.

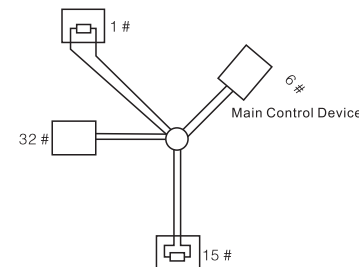


Figure 5–1

In this situation, we recommend RS485 distributor. This device can turn star type connection into the connection that conforms to RS485 bus industry standard, which can avoid the above mentioned problems and enhance communication reliability. See Figure 5-2.

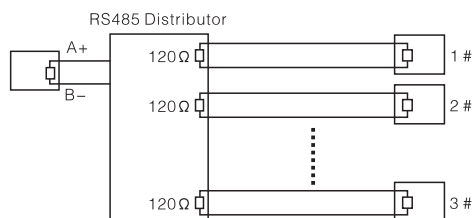


Figure 5-2

## 5.4 RS485 Bus FAQ

Phenomenon	Possible Reasons	Solution
Speed dome can run self-diagnosis but I can not control it.	<ul style="list-style-type: none"> <li>Host address(baud rate) and speed dome address(baud rate) are not match;</li> <li>Positive and negative end of RS485 Bus are misconnected;</li> <li>Connection cable is loose;</li> <li>RS485 Bus connection are cut off;</li> </ul>	<ul style="list-style-type: none"> <li>Modify host or speed dome setup ;</li> <li>Switch RS485 positive end and negative end;</li> <li>Fix connection cable firmly;</li> <li>Replace RS485 Bus.</li> </ul>
I can control the speed dome but is not smooth	<ul style="list-style-type: none"> <li>RS485 Bus connection are not good;</li> <li>One RS485 bus is off;</li> <li>The distance between host and speed dome is too far;</li> <li>Parallel connected too much speed domes.</li> </ul>	<ul style="list-style-type: none"> <li>Connect RS 485 Bus again;</li> <li>Replace RS485 Bus;</li> <li>Add terminal matching resistance;</li> <li>Add RS485 distributor.</li> </ul>

# 6 APPENDIX III THE RELATIONSHIP BETWEEN AC 24V CABLE DIAMETER AND TRANSMISSION DISTANCE

It is to recommend max transmission distance when the cable diameter is fixed and the AC 24V power consumption is below 10%. The recommended max distance is for reference only; specific use shall be based on actual situation. For the AC power supply devices, the max permitted voltage power consumption is 10%. For example, a device with rated power of 20W, installed 141 feet (42m) away from the transformer needs min. cable diameter of 0.8000mm.

Feet(m) / mm W	0.8000	1.000	1.250	2.000
5	488.52 ( 148.90 )	763.31 ( 232.66 )	1192.67 ( 363.53 )	3053.25 ( 930.63 )
10	244.26 ( 74.45 )	381.66 ( 116.33 )	596.34 ( 181.76 )	1526.62 ( 465.31 )
15	162.84 ( 49.63 )	254.44 ( 77.55 )	397.56 ( 121.18 )	1017.75 ( 310.21 )
20	122.13 ( 37.23 )	190.83 ( 58.16 )	298.17 ( 90.88 )	763.31 ( 232.66 )
25	97.70 ( 29.78 )	152.66 ( 46.53 )	238.53 ( 72.71 )	610.65 ( 186.13 )
30	81.42 ( 24.82 )	127.22 ( 38.78 )	198.78 ( 60.59 )	508.87 ( 155.10 )
35	69.79 ( 21.27 )	109.04 ( 33.24 )	170.38 ( 51.93 )	436.18 ( 132.95 )
40	61.06 ( 18.61 )	95.41 ( 29.08 )	149.08 ( 45.44 )	381.66 ( 116.33 )
45	54.28 ( 16.54 )	84.81 ( 25.85 )	132.52 ( 40.39 )	339.25 ( 103.40 )
50	48.85 ( 14.89 )	76.33 ( 23.27 )	119.27 ( 36.35 )	305.32 ( 93.06 )
55	44.41 ( 13.54 )	69.39 ( 21.15 )	108.42 ( 33.05 )	277.57 ( 84.60 )
60	40.71 ( 12.41 )	63.61 ( 19.39 )	99.39 ( 30.29 )	254.44 ( 77.55 )
65	37.58 ( 11.45 )	58.72 ( 17.90 )	91.74 ( 27.96 )	234.87 ( 71.59 )
70	34.89 ( 10.64 )	54.52 ( 16.62 )	85.19 ( 25.97 )	218.09 ( 66.47 )
75	32.57 ( 9.93 )	50.89 ( 15.51 )	79.51 ( 24.24 )	203.55 ( 62.04 )
80	30.53 ( 9.31 )	47.71 ( 14.54 )	74.54 ( 22.72 )	190.83 ( 58.16 )
85	28.74 ( 8.76 )	44.90 ( 13.69 )	70.16 ( 21.38 )	179.60 ( 54.74 )
90	27.14 ( 8.27 )	42.41 ( 12.93 )	66.26 ( 20.20 )	169.62 ( 51.70 )
95	25.71 ( 7.84 )	40.17 ( 12.25 )	62.77 ( 19.13 )	160.70 ( 48.98 )
100	24.43 ( 7.45 )	38.17 ( 11.63 )	59.63 ( 18.18 )	152.66 ( 46.53 )

## 7

## APPENDIX IV WIRE GAUGE REFERENCE SHEET

Metric bare wire diameter (mm)	AWG	SWG	Bare wire cross section mm <sup>2</sup>
0.050	43	47	0.00196
0.060	42	46	0.00283
0.070	41	45	0.00385
0.080	40	44	0.00503
0.090	39	43	0.00636
0.100	38	42	0.00785
0.110	37	41	0.00950
0.130	36	39	0.01327
0.140	35	/	0.01539
0.160	34	37	0.02011
0.180	33	/	0.02545
0.200	32	35	0.03142
0.230	31	/	0.04115
0.250	30	33	0.04909
0.290	29	31	0.06605
0.330	28	30	0.08553
0.350	27	29	0.09621
0.400	26	28	0.1257
0.450	25	/	0.1602
0.560	24	24	0.2463
0.600	23	23	0.2827
0.710	22	22	0.3958
0.750	21	/	0.4417
0.800	20	21	0.5027
0.900	19	20	0.6362
1.000	18	19	0.7854
1.250	16	18	1.2266
1.500	15	/	1.7663
2.000	12	14	3.1420
2.500	/	/	4.9080
3.000	/	/	7.0683

**Note:**

- This manual is for reference only. Slight difference may be found in the user interface.
- All the designs and software here are subject to change without prior written notice.
- All trademarks and registered trademarks are the properties of their respective owners.
- If there is any uncertainty or controversy, please refer to the final explanation of us.
- Please visit our website or contact your local service engineer for more information.